


RPL-5303-A PLATE-LOADED INCLINE CHEST PRESS

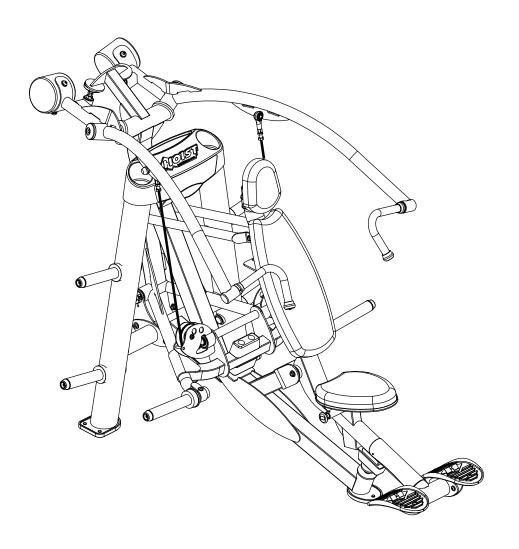

WARNING!

TO PREVENT POSSIBLE TIPPING, BOLT THIS UNIT TO THE EXERCISE FLOOR USING MINIMUM 4-1/2" LONG BOLTS. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY OR DEATH.

Note: Both Serial Number and Model Number are Required when Ordering Parts RECORD SERIAL NUMBER HERE <u>Customer Service</u>

(800) 548-5438

(858) 578-7676

Fax

(858) 578-9558

A09

MACHINE CODE



CONTENTS

| INSTRUCTIONS 0 |)2 |
|-----------------------------------|----------------|
| FRAME ASSEMBLY0 |)4 |
| MACHINE ADJUSTMENT 2 | 24 |
| PRE-ASSEMBLY 2 | 26 |
| DECAL PLACEMENT 2 | 27 |
| DECAL REFERENCE 2 | 28 |
| PART LIST 3 | 31 |
| ABBREVIATIONS 3 | 34 |
| BOLT SIZING CHART 3 | 35 |
| WASHER SIZING CHART 3 | 36 |
| MAINTENANCE SCHEDULE 3 | 38 |
| GENERAL MAINTENANCE INFORMATION 3 | 39 |
| WEIGHT TRAINING TIPS 4 | 1 0 |
| EXERCISE LOG 4 | 11 |
| LIMITED WARRANTY 4 | 42 |

INSTRUCTIONS

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only HOIST replacement parts when servicing. Failure to do so will void your warranty and could result in personal injury.

HOIST equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized HOIST dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

TOOLS REQUIRED

Ratchet Wrench

1/2", 9/16" and 3/4" Sockets

Adjustable Wrench

Rubber Mallet


Tape Measure


Level


Hex Key Wrench Set


Two People


THIS PAGE WAS INTENTIONALLY LEFT BLANK

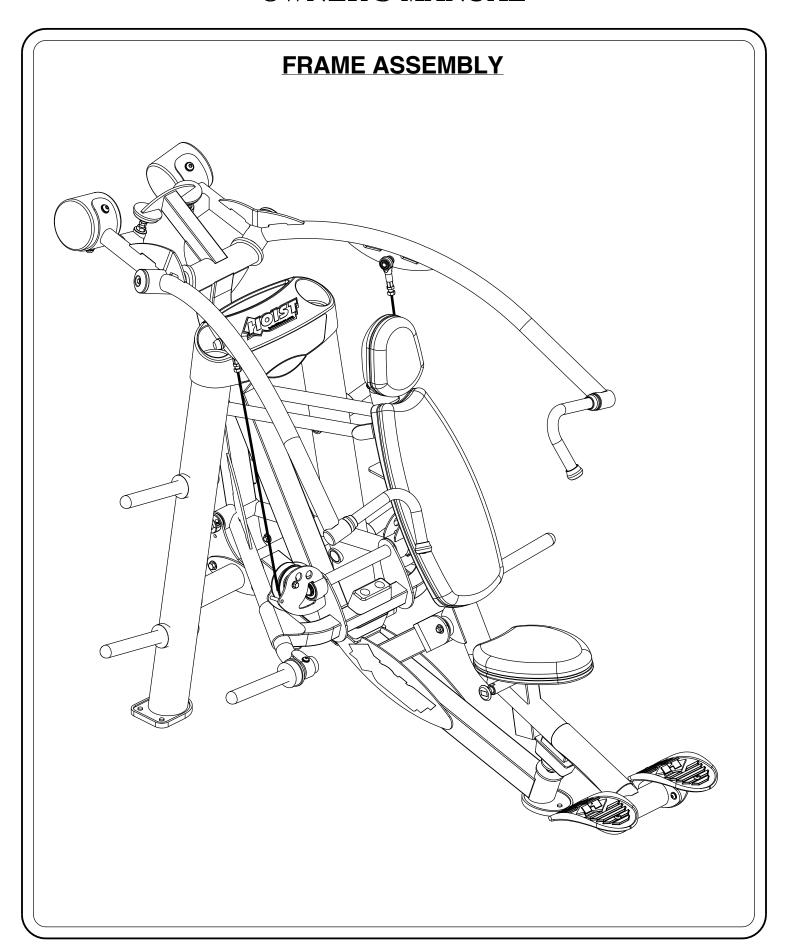


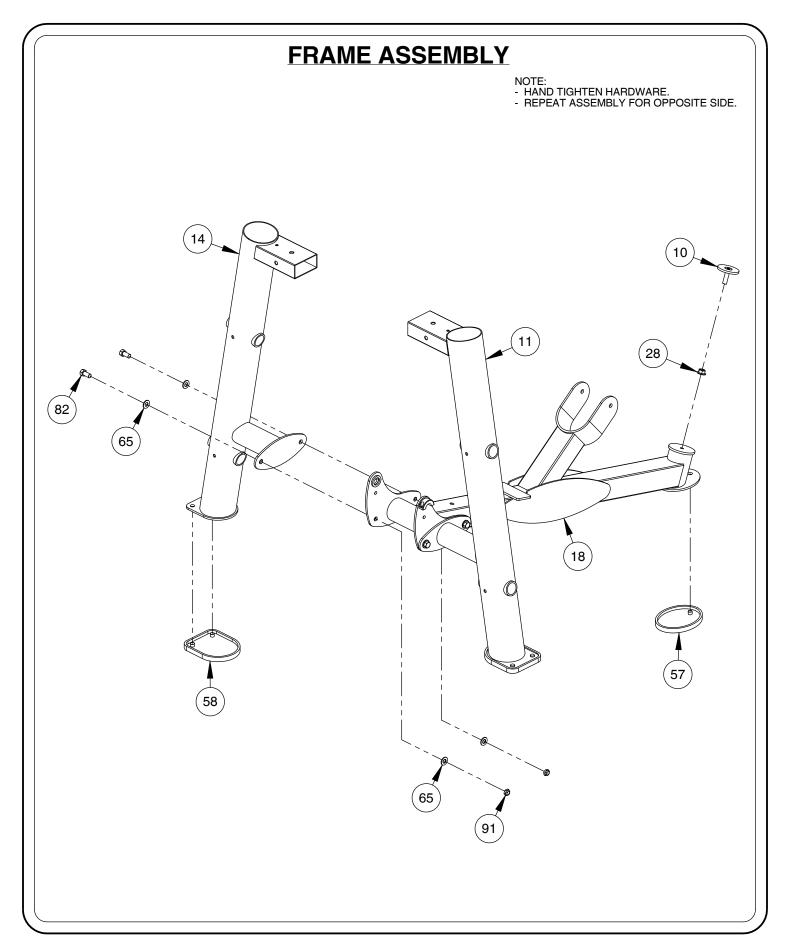


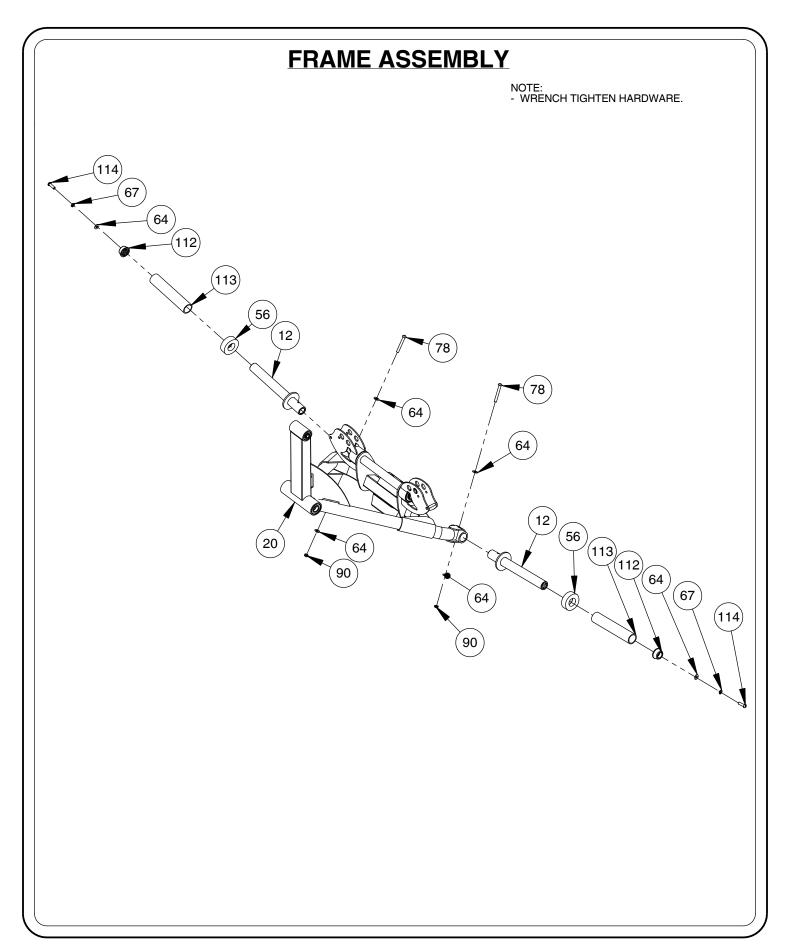


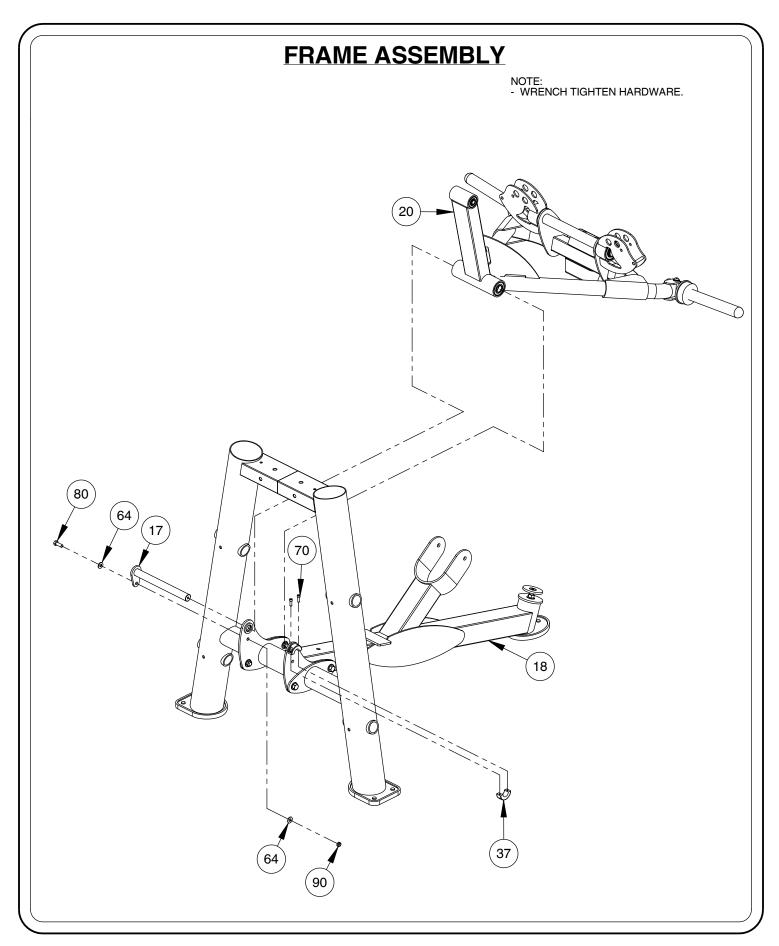


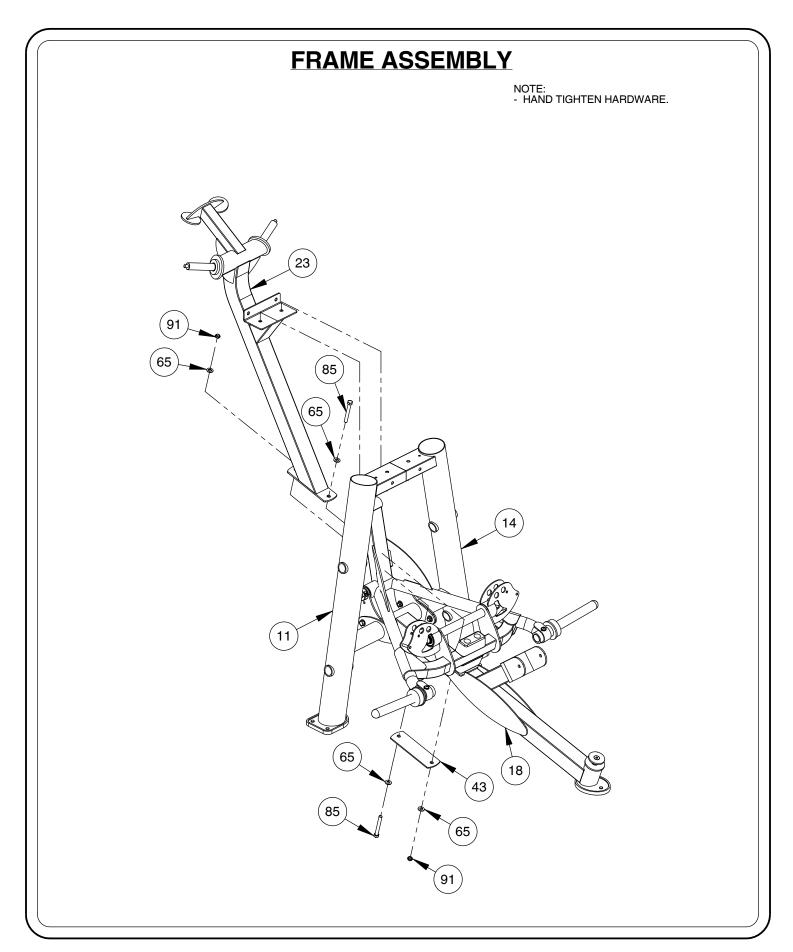


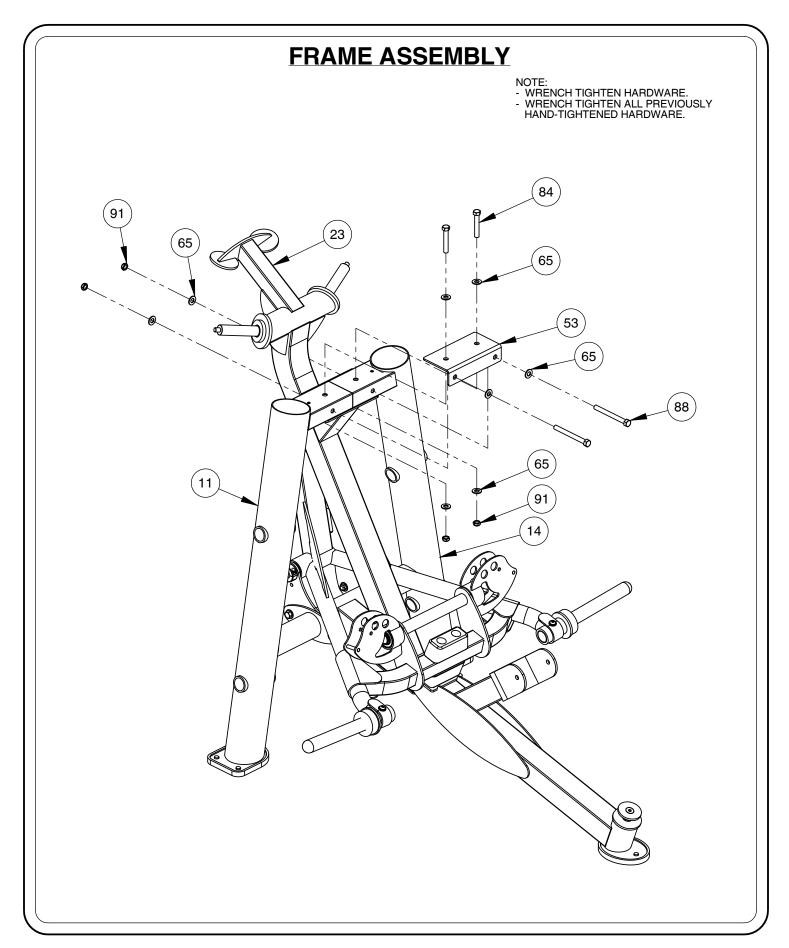


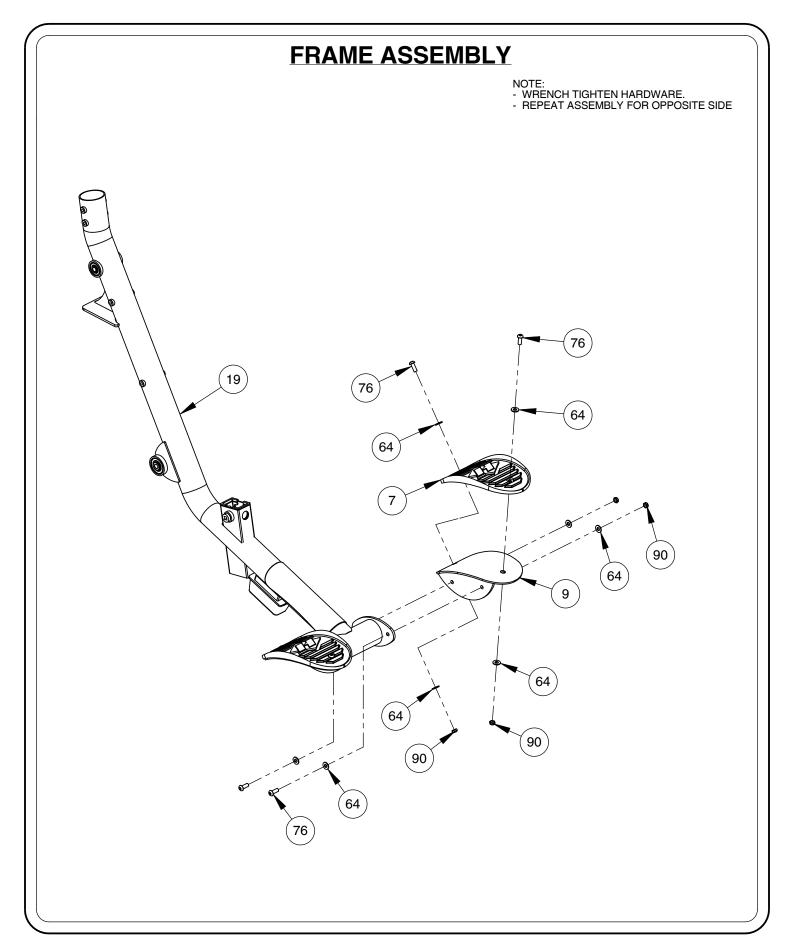


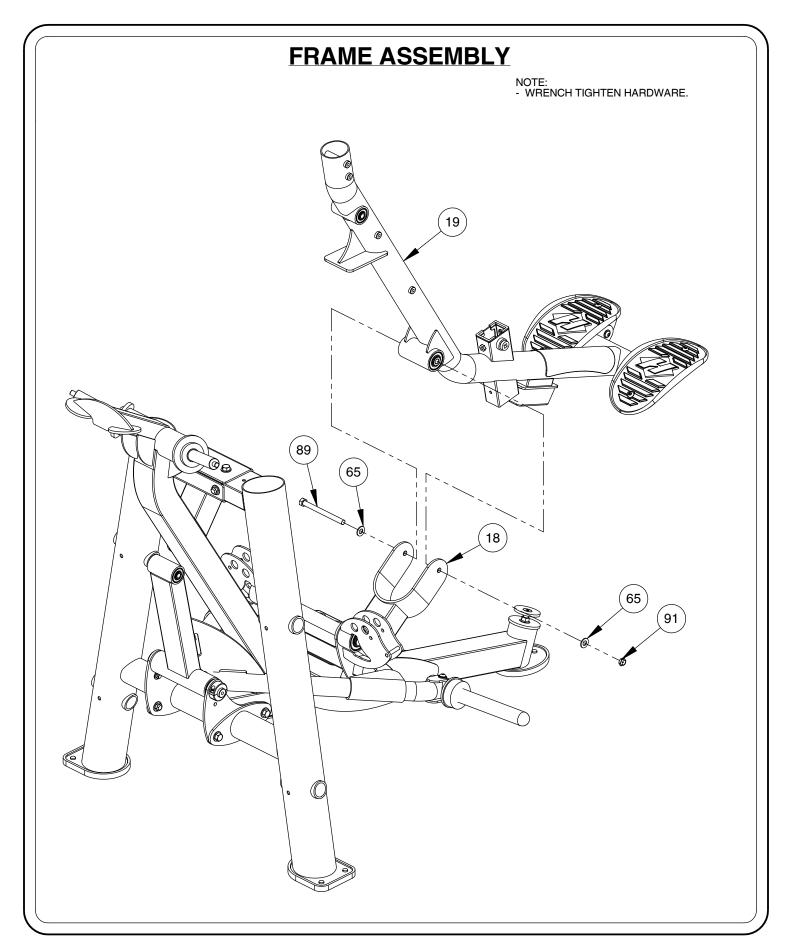


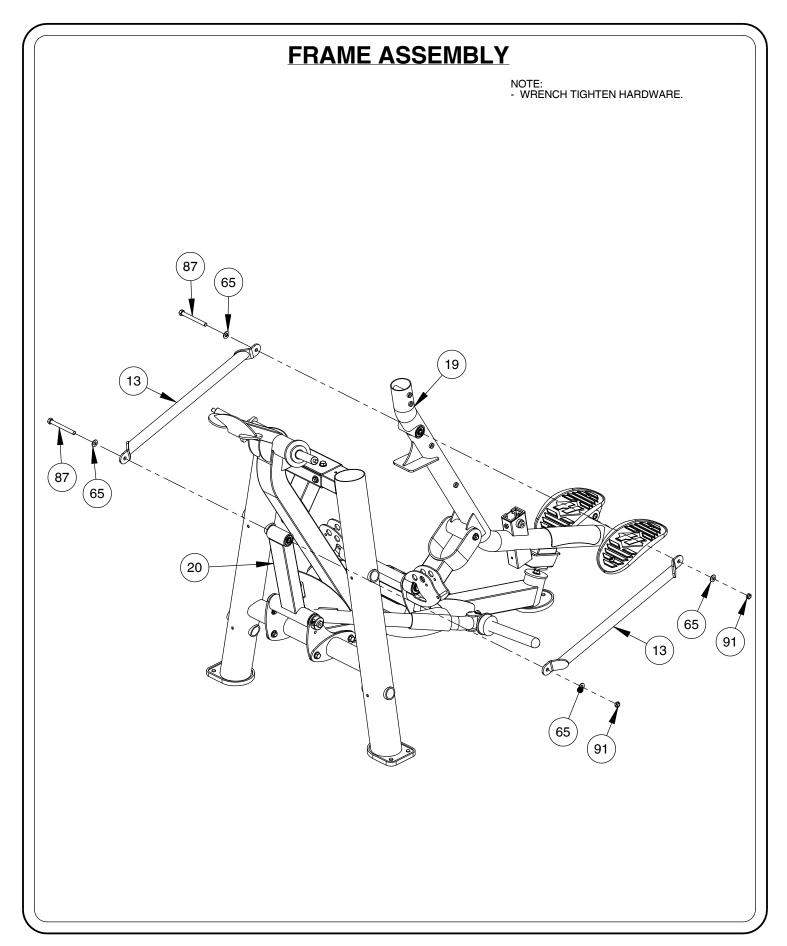


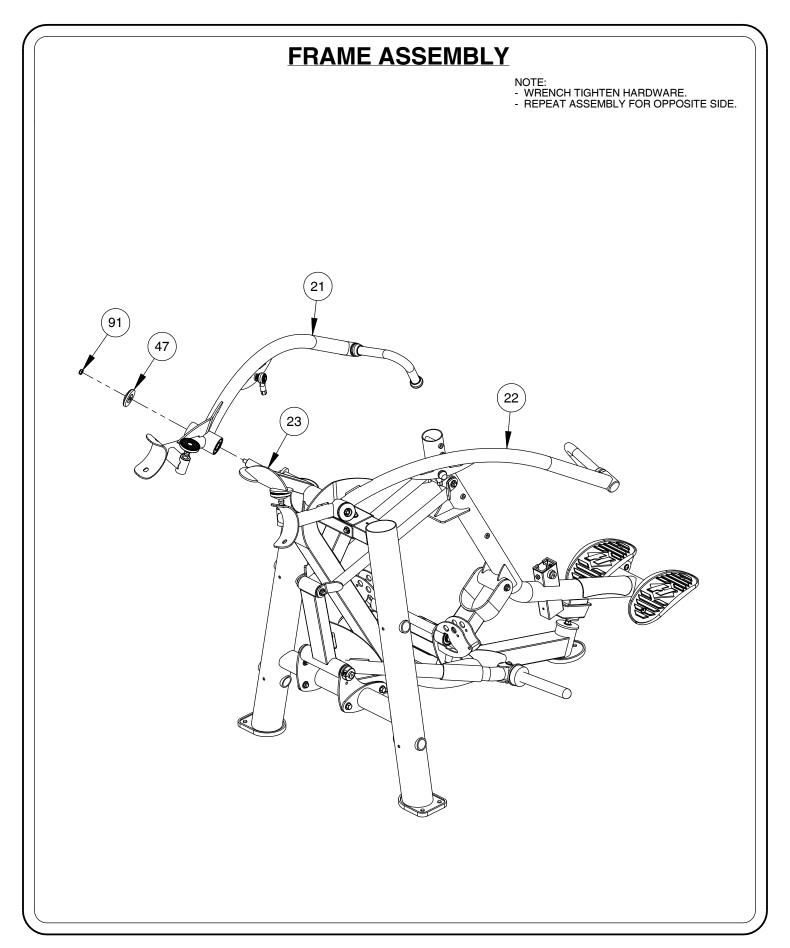


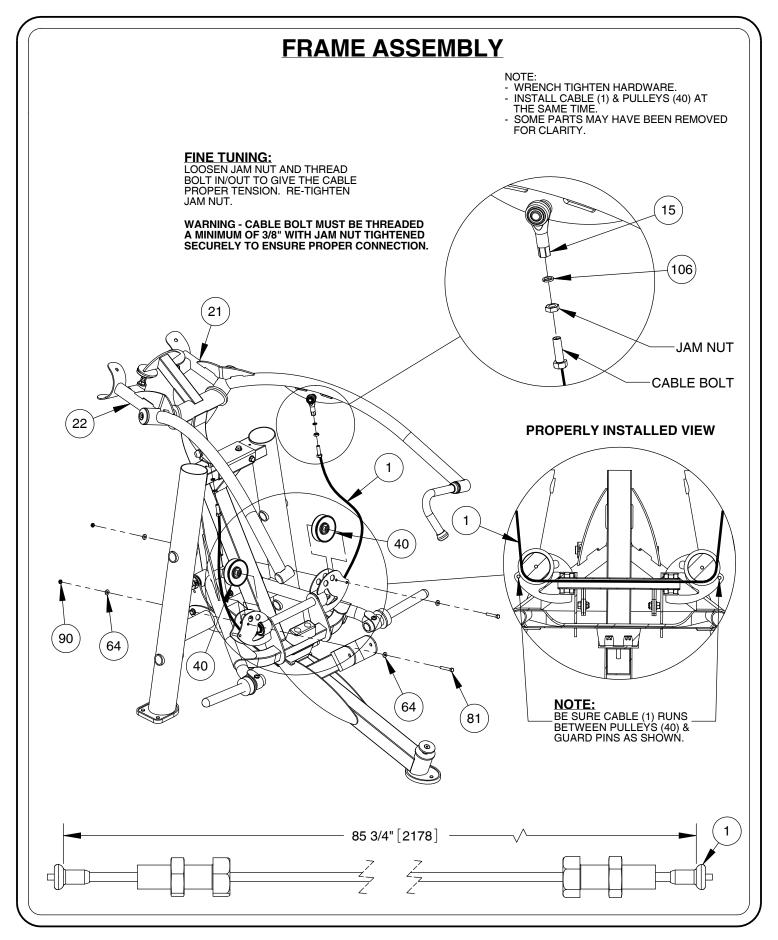


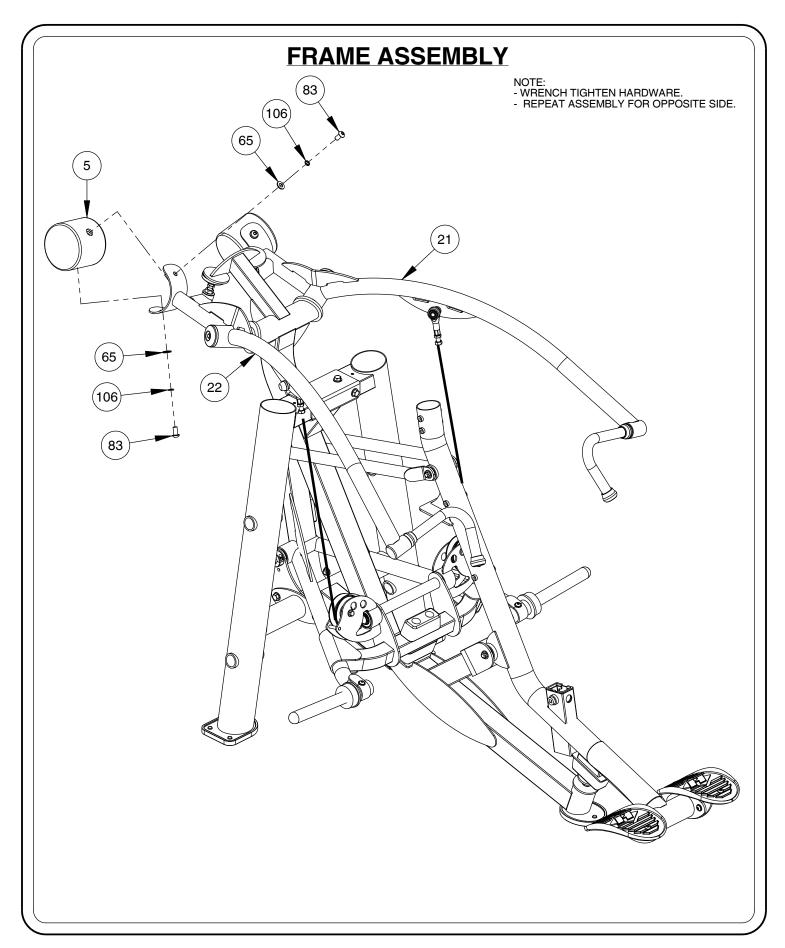


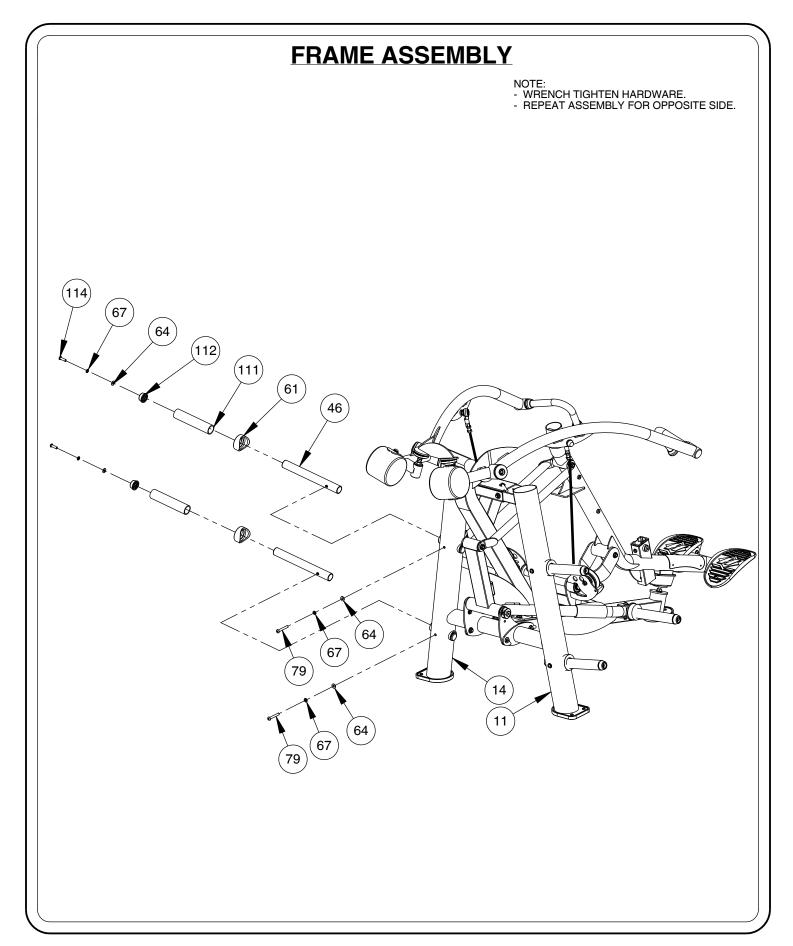


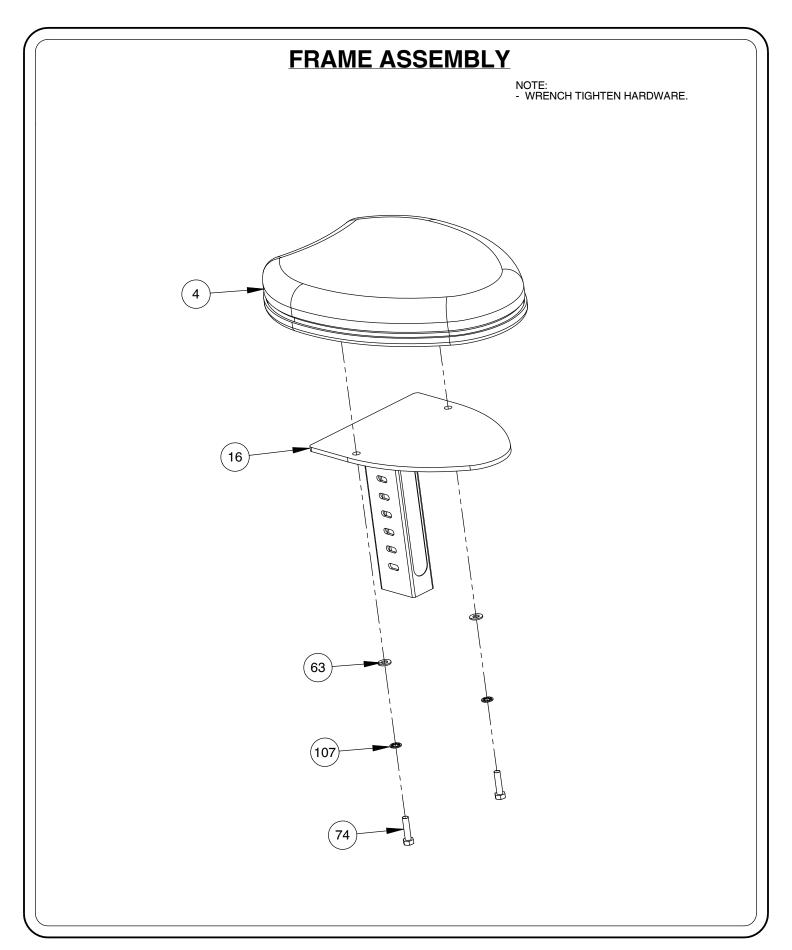

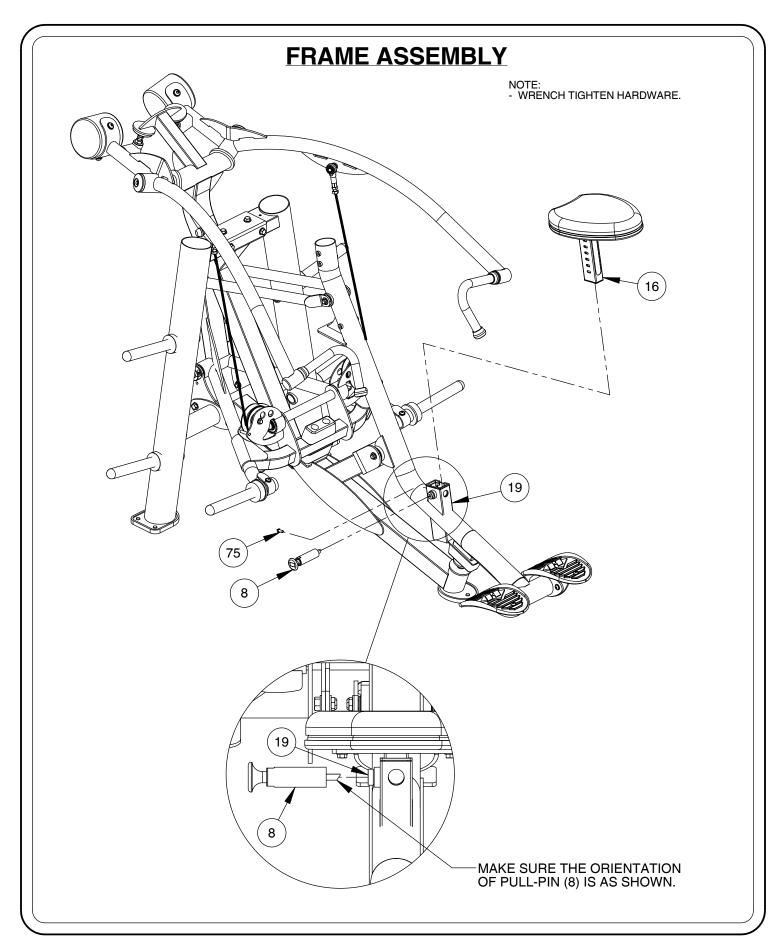


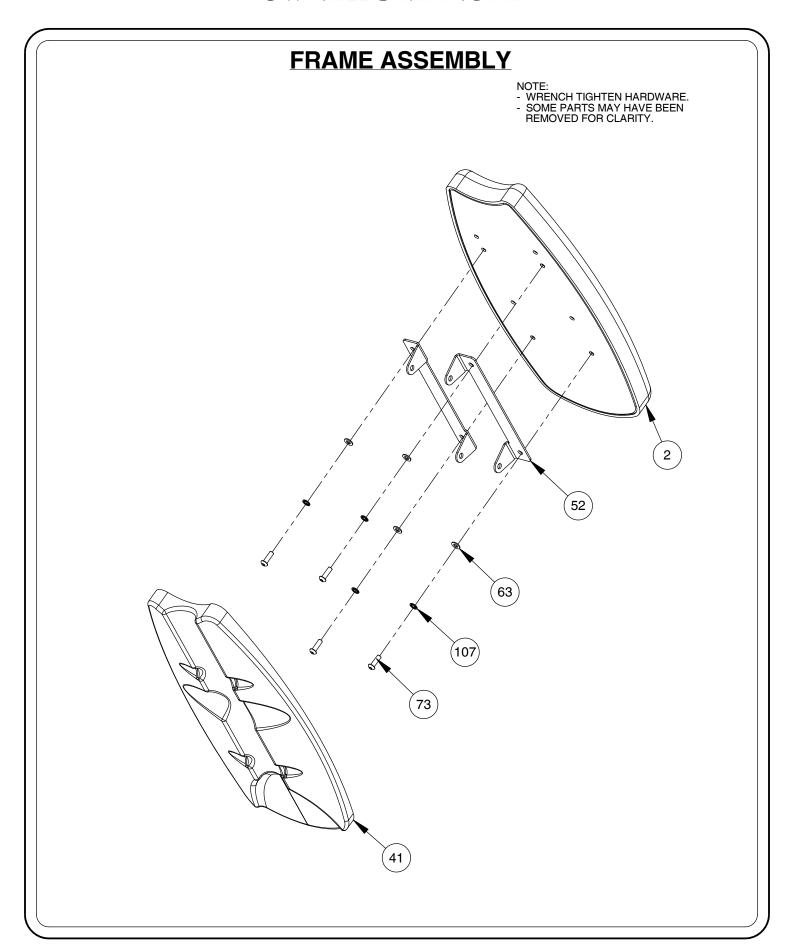


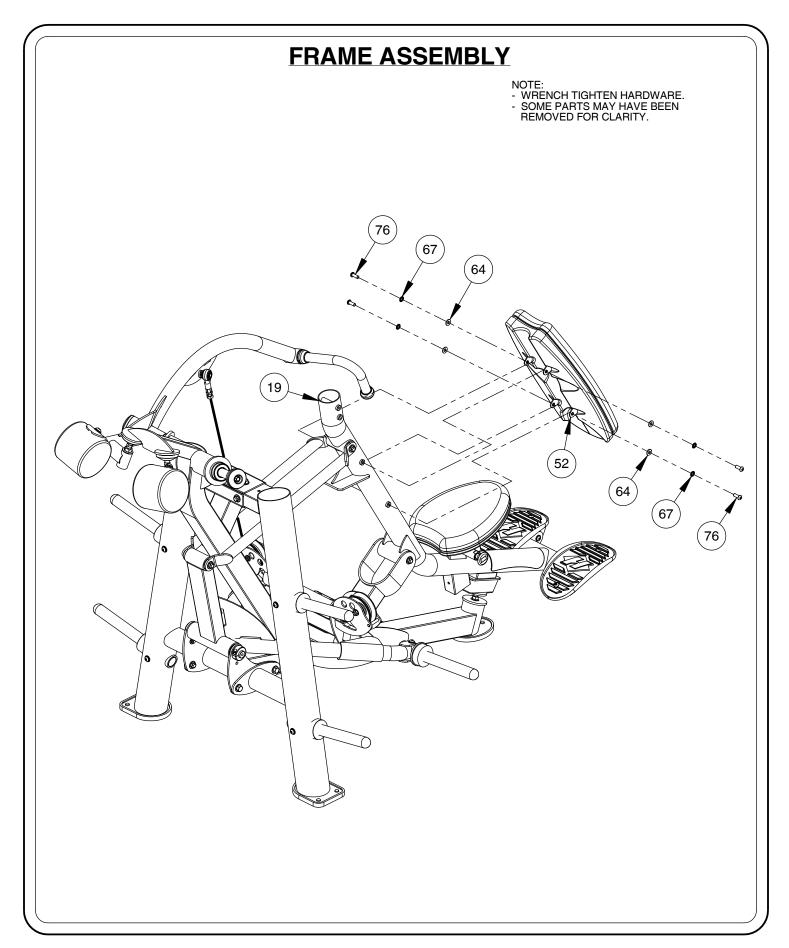

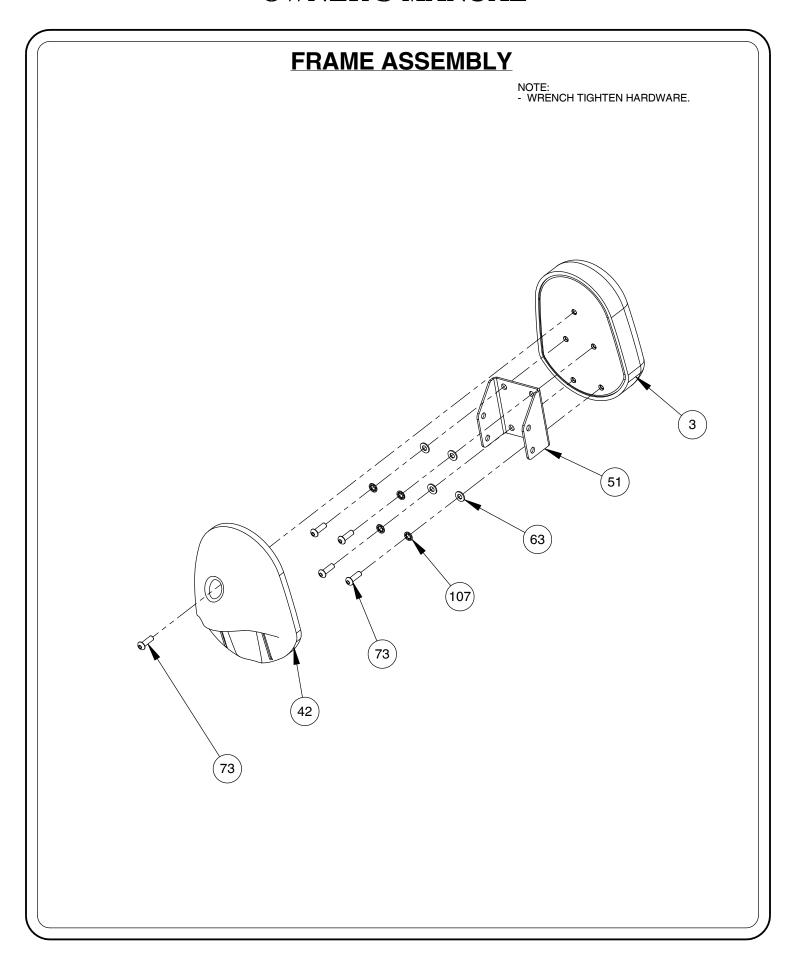


PAGE 21

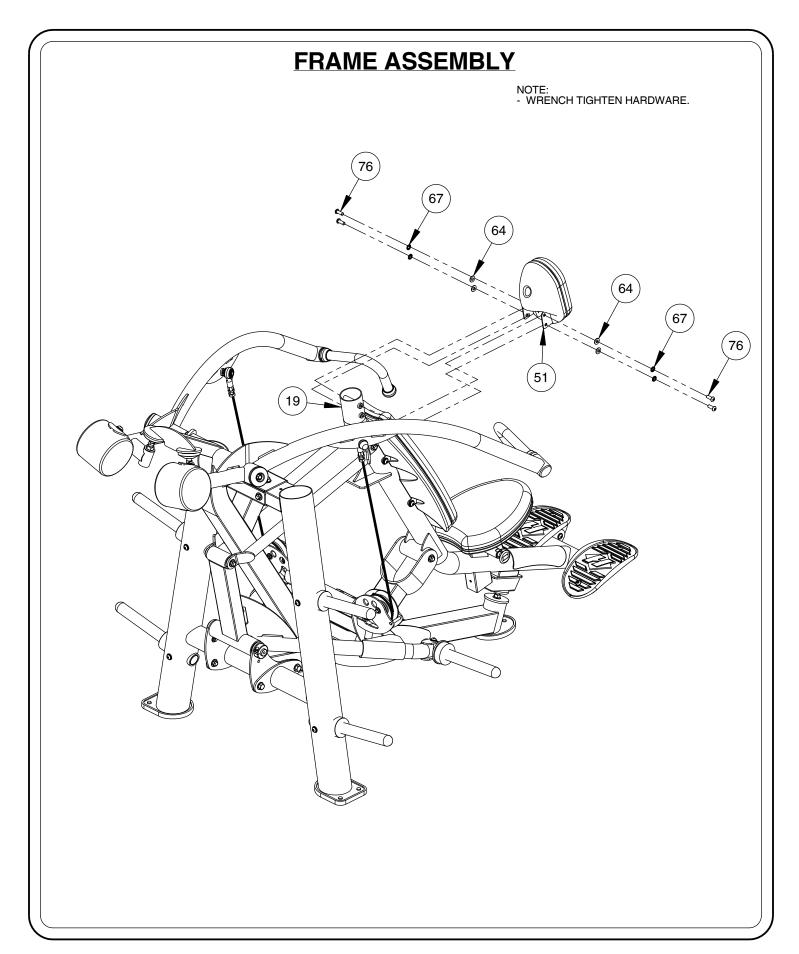

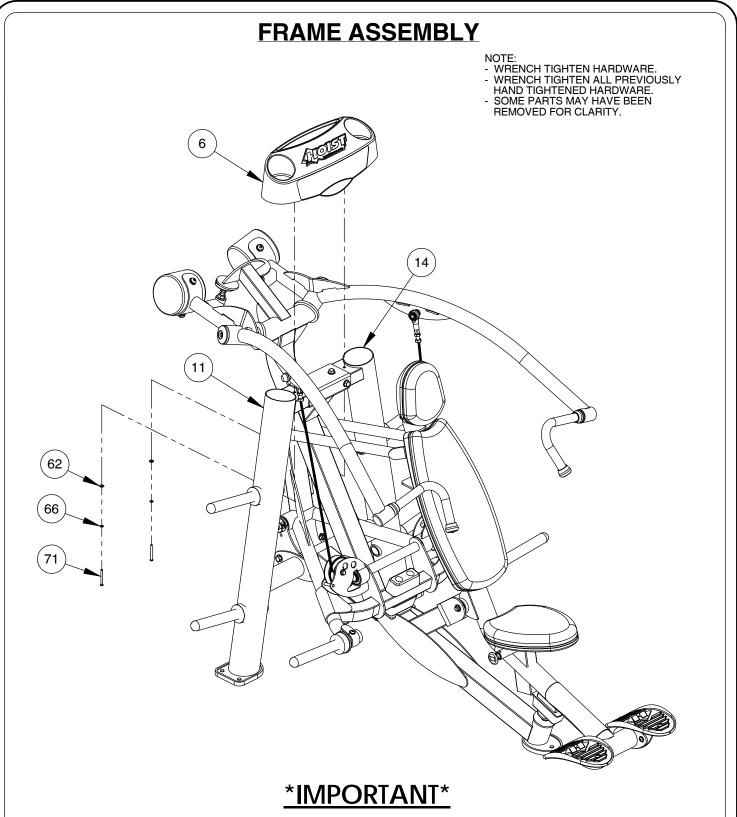


NOW THAT THE RPL-5303-A IS COMPLETELY ASSEMBLED TAKE TIME TO ASSURE THAT YOUR UNIT IS ASSEMBLED SQUARE AND PERPENDICULAR. IF NOT, IT WILL BE NECESSARY TO LOOSEN SOME FRAME HARDWARE TO RE-ALIGN THE FRAME AND RETIGHTEN BOLTS.

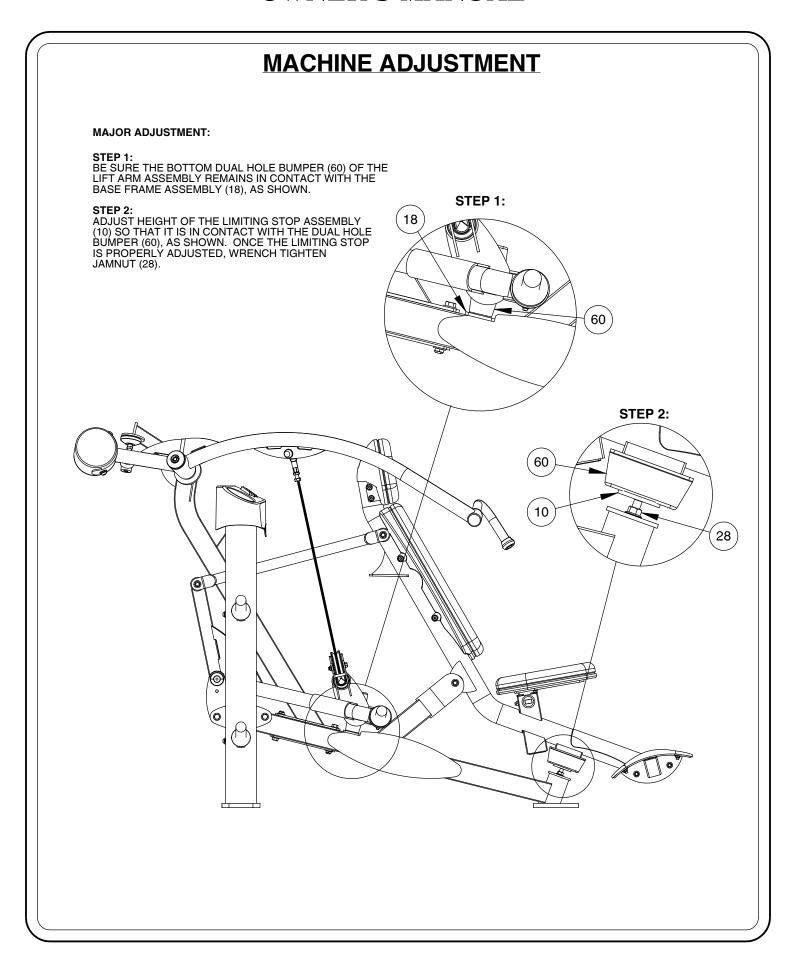



MACHINE ADJUSTMENT

MAJOR ADJUSTMENT:

LOOSEN JAM NUTS (27). TWIST THE SHAFT OF THE ADJUSTABLE STOPS (24) IN OR OUT TO CHANGE THE HEIGHT AND DEPTH OF THE PRESS-ARMS (21 AND 22). THEN TIGHTEN THE JAM NUTS (27). NOW TIGHTEN THE CABLE ANCHOR BOLTS TO REMOVE ALL SLACK FROM THE CABLE (1) AND RE-TIGHTEN JAM NUTS.

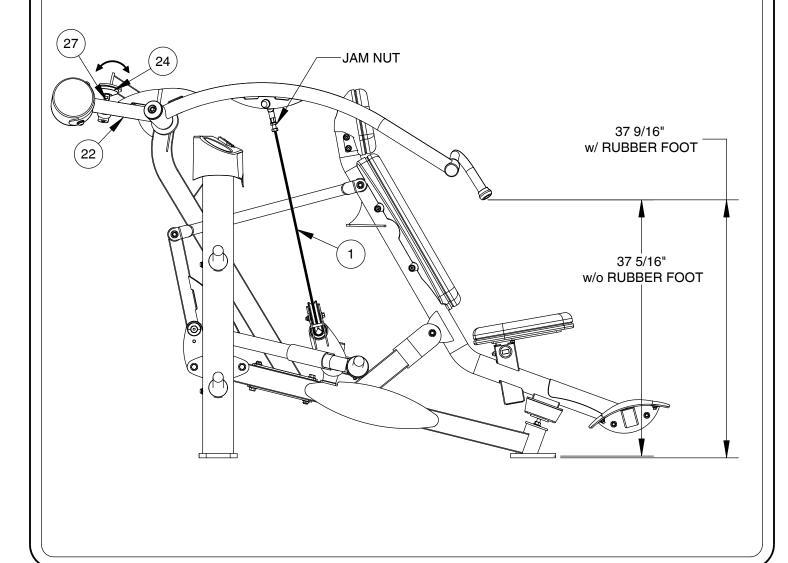

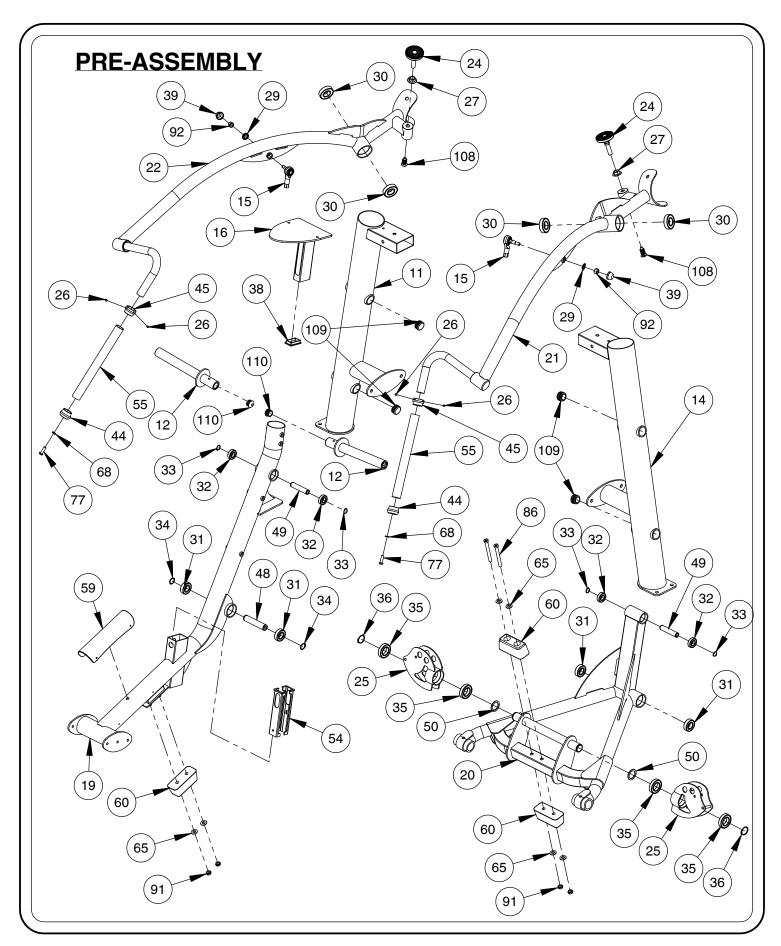

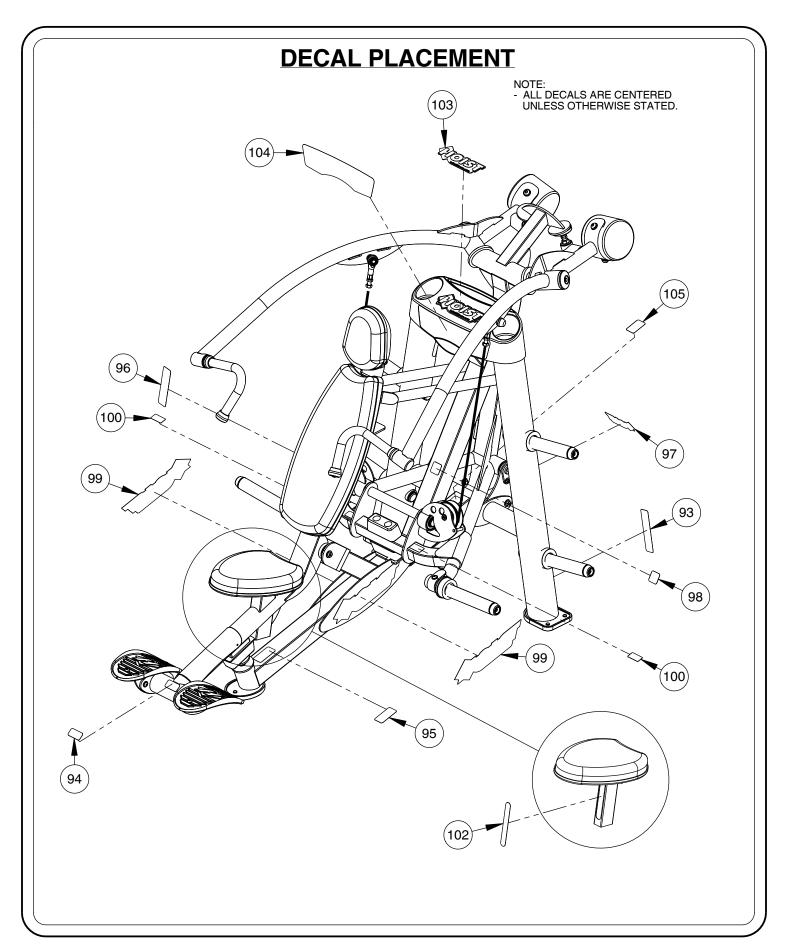

DECAL REFERENCE



021-0003341



021-0003320



021-0003113



021-0003093



1-800-548-5438 www.hoistfitness.com

SERIAL # 00-00-A-000000

SERIAL # DECAL

021-0003135

| | Ajzeoz | | | | | | | | | | | | ¥ |
|------------------|--|--|----------------------|---|---|------------------------|---|-----------------------------------|---|--|--|--|---|
| | Months | | | | | | | | | | Х | Ж | |
| Ш | $\Lambda_{I^{\prime}I^{\prime}I^{\prime}I^{\prime}I^{\prime}I^{\prime}I^{\prime}I^{\prime$ | | | | | | | | × | × | | | |
| $\left(\right)$ | Wookly | | | | × | × | × | × | | | | | |
| ĭ | N^{BR} | x | × | × | | | | | | | | | |
| NOI | COMMERCIAL | Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins | Clean; Upholstery | Inspect; Cables or Belts and their tension | Inspect; Accessory Bars and Handles | Inspect; All Decals | Inspect; All nuts and Bolts Tighten if Needed. | Inspect; Anti-Skid Surfaces | Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube) | Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing | Clean & Wax; All Glossy Finishes | Repeck with Grease Linear Bearings | Replace; Cables, Belts and Connecting Parts. |

021-0003008



THIS PAGE WAS INTENTIONALLY LEFT BLANK

PART LIST

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY |
|----------|----------------|--|-----|
| 1 | 010-01C0655 | CABLE ASSEMBLY: RPL-5303-A 85.75" LG. | 1 |
| 2 | 022-01PD2058 | BACK PAD ASSEMBLY | 1 |
| 3 | 022-01PD2055 | UPHOLSTERED HEAD PAD | 1 |
| 4 | 022-01PD2054-A | SEAT PAD ASSEMBLY | 1 |
| 5 | 026-01M2358 | 30 LB. COUNTERWEIGHT, RUBBER COATED | 2 |
| 6 | 026-01PL2236 | TOP CAP W/INSERTS | 1 |
| 7 | 026-01PL2124 | FOOTPLATE, MOLDED | 2 |
| 8 | 026-01X2849 | RACHET PULL-PIN ASSEMBLY | 1 |
| 9 | 026-01X2975 | FOOT PLATE MOUNT ASSEMBLY | 2 |
| 10 | 026-01X3292 | LIMITING STOP ASSEMBLY | 1 |
| 11 | 026-01X3294 | REAR UPRIGHT LEFT ASSEMBLY | 1 |
| 12 | 026-01X6626 | RPL LIFT WEIGHT HORN | 2 |
| 13 | 026-01X3308 | LINK ASSEMBLY | 2 |
| 14 | 026-01X3377 | REAR UPRIGHT RIGHT ASSEMBLY | 1 |
| 15 | 026-01X3725 | TIE-ROD END RIGHT HANDED ASSEMBLY | 2 |
| 16 | 026-01X3426 | SEAT PAD MOUNT ASSEMBLY | 1 |
| 17 | 026-01X3536 | SHAFT, ROCKING LINK | 1 |
| 18 | 026-01X3603 | BASE FRAME ASSEMBLY | 1 |
| 19 | 026-01X3606 | USER SUPPORT FRAME ASSEMBLY | 1 |
| 20 | 026-01X3607 | LIFT ARM ASSEMBLY | 1 |
| 21 | 026-01X3608 | RIGHT PRESS ARM ASSEMBLY | 1 |
| 22 | 026-01X3609 | LEFT PRESS ARM ASSEMBLY | 1 |
| 23 | 026-01X3610 | CENTER UPRIGHT ASSEMBLY | 1 |
| 24 | 026-01X5186 | LEVELING FOOT (M16X2.0) | 2 |
| 25 | 026-01X5415 | SWIVEL PULLEY HOUSING | 2 |
| 26 | 011-0411001 | SET SCREW: 1/4"-28 X .25" LG. (SS) | 4 |
| 27 | 012-0103001 | 16M X 2.0 FLANGED NUT (WZ) | 2 |
| 28 | 012-0202001 | 1/2"-13 FLANGED NUT (WZ) | 1 |
| 29 | 013-0001003 | .50" CAP WASHER | 2 |
| 30 | 014-0012013 | BEARING: BALL BEARING Ø2.44" O.D. X Ø1.18" I.D. | 4 |
| 31 | 014-0012014 | BEARING: FLANGELESS - 25mm I.D. | 4 |
| 32 | 014-0012015 | BEARING: FLANGELESS \emptyset 1.65" O.D. X \emptyset .79" I.D. X .47" WIDE | 4 |
| 33 | 014-0012017 | SNAP RING - 20mm EXTERNAL | 4 |
| 34 | 014-0012018 | SNAP RING - 25mm EXTERNAL | 2 |
| 35 | 014-0012020 | BEARING - FLANGELESS BALL 2.44" O.D. X 35MM I.D. X .55" | 4 |
| 36 | 014-0015023 | EXTERNAL SNAP RING 1.38" DIA. | 2 |
| 37 | 014-0019005-1 | T SPLIT COLLAR THREADED ∅1.00" I.D. X 20mm | 1 |
| 38 | 016-0001003 | END CAP 1.50" X 2.50" (BLACK) | 1 |
| 39 | 016-0003001 | .50" CAP WASHER CAP | 2 |
| 40 | 018-0002014 | CABLE PULLEY: WIDE (BORED HUB) Ø4.50" | 2 |

PART LIST CONTINUED

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY |
|----------|-----------------|---|-----|
| 41 | 022-01PD2058-5 | PLASTIC BACK PAD BACKING | 1 |
| 42 | 022-01PD2073-5 | HEAD PAD PLASTIC BACKING | 1 |
| 43 | 026-01F0316 | 8" FLNG. | 1 |
| 44 | 026-01M0932 | ALUMINIUM CAP: Ø1.25" ID | 2 |
| 45 | 026-01M0933 | ALUMINUM RING: Ø1.25" ID | 2 |
| 46 | 026-01X6625 | RPL STORAGE WEIGHT HORN | 4 |
| 47 | 026-01M2356 | END CAP: DOMED Ø 2.75" O.D. | 2 |
| 48 | 026-01M2360 | SHAFT - ∅25mm X 4.71" LG. | 1 |
| 49 | 026-01M2618 | SHAFT- ∅20mm X .52" ID X 3.75" LG. | 2 |
| 50 | 026-01M2724 | WASHER, 1.88" OD X 1.41" ID X .125" T | 2 |
| 51 | 026-01P2907 | HEAD BRACKET MOUNT | 1 |
| 52 | 026-01P2925 | PAD MOUNT BRACKET | 2 |
| 53 | 026-01P3962 | L-BRKT | 1 |
| 54 | 026-01PL0125 | E-Z GLIDE PLASTIC SLEEVE | 2 |
| 55 | 026-01PL0235-33 | Ø1.188" X 14.17" OPEN END GRIP | 2 |
| 56 | 026-01PL0264 | WEIGHT HORN RUBBER DONUT | 2 |
| 57 | 026-01PL2122 | OVAL-SHAPED RUBBER FOOT | 1 |
| 58 | 026-01PL2131 | D-SHAPED RUBBER FOOT | 2 |
| 59 | 026-01PL2519 | PLASTIC SCUFF GUARD 11.05" LG. WITH RIVETS | 1 |
| 60 | 026-01PL2246 | DUAL HOLE BUMPER 2.05" THICK | 3 |
| 61 | 026-01PL2533 | RUBBER DONUT FOR PLASTIC WEIGHT HORN | 4 |
| 62 | 013-1002008 | 1/4" X 16mm SAE FLAT WASHER (Ni) | 2 |
| 63 | 013-1002010 | 5/16" SAE FLAT WASHER (Ni) | 10 |
| 64 | 013-1002007 | 3/8" X 22mm FLAT WASHER (Ni) | 44 |
| 65 | 013-1002006 | 1/2" X 27mm SAE FLAT WASHER (Ni) | 36 |
| 66 | 013-1006001 | 1/4" SPLIT LOCK WASHER (Ni) | 2 |
| 67 | 013-1006003 | 3/8" SPLIT LOCK WASHER (Ni) | 18 |
| 68 | 013-0402011 | 3/8" SPLIT LOCK WASHER (SS) | 2 |
| 70 | 011-0007097 | 1/4"-20UNC X .75" SHCS (BZ) | 2 |
| 71 | 011-0701083 | 1/4"-20UNC X 2.50" BHCS (Ni) w/ NYLON PATCH | 2 |
| 73 | 011-0701003 | 5/16"-18UNC X 1.00" BHCS (Ni) | 9 |
| 74 | 011-0701004 | 5/16"-18UNC X 1.25" BHCS (Ni) | 2 |
| 75 | 011-0704001 | 3/8-16UNC X .75" SQUARE HEAD (Ni) | 1 |
| 76 | 011-0701020 | 3/8"-16UNC X 1.00" BHCS (Ni) | 16 |
| 77 | 011-0401002 | 3/8"-16UNC X 1.25" BHCS (SS) | 2 |
| 78 | 011-0701028 | 3/8"-16UNC X 3.00" BHCS (Ni) | 2 |
| 79 | 011-0701027 | 3/8"-16UNC X 2.75" BHCS (Ni) | 4 |

PART LIST CONTINUED

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

| ITEM NO. | PART NUMBER | DESCRIPTION | QTY |
|----------|----------------|---|-----|
| 80 | 011-0116142 | 3/8"-16UNC X 1.00" LOW HEAD SHCS (Ni) | 1 |
| 81 | 011-0116148 | 3/8"-16UNC X 2.50" LOW HEAD SHCS (Ni) | 2 |
| 82 | 011-0116107 | 1/2"-13UNC X 1.00" LOW HEAD SHCS (Ni) | 4 |
| 83 | 011-0701047 | 1/2"-13UNC X 1.00" BHCS (Ni) | 4 |
| 84 | 011-0116115 | 1/2"-13UNC X 3.00" LOW HEAD SHCS (Ni) | 2 |
| 85 | 011-0116119 | 1/2"-13UNC X 4.00" LOW HEAD SHCS (Ni) | 2 |
| 86 | 011-0116120 | 1/2"-13UNC X 4.25" LOW HEAD SHCS (Ni) | 2 |
| 87 | 011-0116122 | 1/2"-13UNC X 4.75" LOW HEAD SHCS (Ni) | 2 |
| 88 | 011-0116123 | 1/2"-13UNC X 5.00" LOW HEAD SHCS (Ni) | 2 |
| 89 | 011-0116126 | 1/2"-13UNC X 5.75" LOW HEAD SHCS (Ni) | 1 |
| 90 | 012-0504005 | 3/8"-16 UNC THIN NYLOCK NUT (Ni) | 13 |
| 91 | 012-0504002 | 1/2"-13 UNC THIN NYLOCK NUT (Ni) | 19 |
| 92 | 012-0504011 | 12mm THICK NYLOCK NUT (Ni) | 2 |
| 93 | 021-0003008 | DECAL COMMERCIAL MAINTENANCE 1.50 X 6.69 | 1 |
| 94 | 021-0003093 | DECAL MOVING PARTS 1.20" X 2.38" (HOR) | 1 |
| 95 | 021-0003113 | DECAL PINCH POINT 1.63" X 3.25" (VERTICAL) | 1 |
| 96 | 021-0003135 | DECAL WARNING 1.50" X 6.69" | 1 |
| 97 | 021-0003230 | DECAL HOIST 1.625" X 6.0613" | 1 |
| 98 | 021-0003320 | DECAL 800 LB. WEIGHT RATING (1.63" X 1.63") | 1 |
| 99 | 021-0003334 | DECAL HOIST 3.88" X 14.45" | 2 |
| 100 | 021-0003341 | DECAL PINCH POINT 1.07" X 2.13" (HORIZONTAL) | 2 |
| 102 | 021-0004032 | DECAL ADJUST 1-7 VERTICAL TXT. | 1 |
| 103 | 021-0018022 | DECAL HOISTFITNESS.COM LOGO | 1 |
| 104 | 021-0003693 | RPL-5303 INCLINE CHEST PRESS PLACARD | 1 |
| 105 | SERIAL # DECAL | DECAL HOIST SERIAL # 1.63" X 2.63" | 1 |
| 106 | 013-1006008 | M12 SPLIT LOCK WASHER (Ni) | 6 |
| 107 | 013-1010003 | 5/16" INTERNAL LOCK WASHER (Ni) | 10 |
| 108 | 026-01PL2200 | PINETREE PLUG | 2 |
| 109 | 016-0201023 | END CAP ∅1.50" (BLACK) | 4 |
| 110 | 026-01PL0286 | Ø1.25" END PLUG | 2 |
| 111 | 026-01PL2532 | LONG WEIGHT HORN COVER | 4 |
| 112 | 026-01PL2535 | WEIGHT HORN END CAP | 6 |
| 113 | 026-01PL2576 | 9.25" WEIGHT HORN COVER | 2 |
| 114 | 011-0701084 | 3/8"-16UNC X 1.25" BHCS (Ni) W/ DRI-LOC PATCH | 6 |

ABBREVIATIONS

BZ = Black Zinc

Ni = Nickel Plated

SS = Stainless Steel

WZ = White Zinc



HHB = Hex Head Bolt



FHCS = Flat Head Cap Screw



BHCS = Button Head Cap Screw



SHCS = Socket Head Cap Screw





Low Head SHCS = Low Head Socket Head Cap Screw



SHSS = Socket Head Shoulder Screw

BOLT SIZING CHART 1/4" HHB 5/16" HHB 3/8" HHB 1/2" HHB RECOMMENDED RECOMMENDED RECOMMENDED RECOMMENDED TORQUE RANGE: **TORQUE RANGE: TORQUE RANGE: TORQUE RANGE:** 6-8 ft-lbs 14-17 ft-lbs 24-30 ft-lbs 60-75 ft-lbs 5/16" BHCS 3/8" BHCS 1/2" BHCS 1/4" BHCS RECOMMENDED RECOMMENDED RECOMMENDED RECOMMENDED **TORQUE RANGE:** TORQUE RANGE: TORQUE RANGE: TORQUE RANGE: 5-7 ft-lbs 11-15 ft-lbs 19-26 ft-lbs 47-65 ft-lbs 1/4" 5/16" 3/8" 1/2" **LOW HEAD LOW HEAD LOW HEAD LOW HEAD SHCS SHCS SHCS SHCS** \bigcirc RECOMMENDED RECOMMENDED RECOMMENDED RECOMMENDED TORQUE RANGE: TORQUE RANGE: TORQUE RANGE: **TORQUE RANGE:** 4-6 ft-lbs 9-12 ft-lbs 18-23 ft-lbs 40-50 ft-lbs 1/4" SHCS 5/16" SHCS 3/8" SHCS RECOMMENDED RECOMMENDED RECOMMENDED **TORQUE RANGE:** TORQUE RANGE: **TORQUE RANGE:** 11-14 ft-lbs 23-29 ft-lbs 39-49 ft-lbs 3/4" 3/4" 3/ 3/4 0 1/2" FHCS 3/8" FHCS 1/4" FHCS RECOMMENDED RECOMMENDED RECOMMENDED TORQUE RANGE: **TORQUE RANGE:** TORQUE RANGE: 47-65 ft-lbs 5-7 ft-lbs 19-26 ft-lbs 3/4" 3/4" 3/4" 3/4 , ~ 0 \sim $^{\circ}$ 3/8" SHSS 5/16" SHSS 1/4" SHSS RECOMMENDED RECOMMENDED RECOMMENDED **TORQUE RANGE: TORQUE RANGE: TORQUE RANGE:** 17-22 ft-lbs 8-10 ft-lbs 3-4 ft-lbs

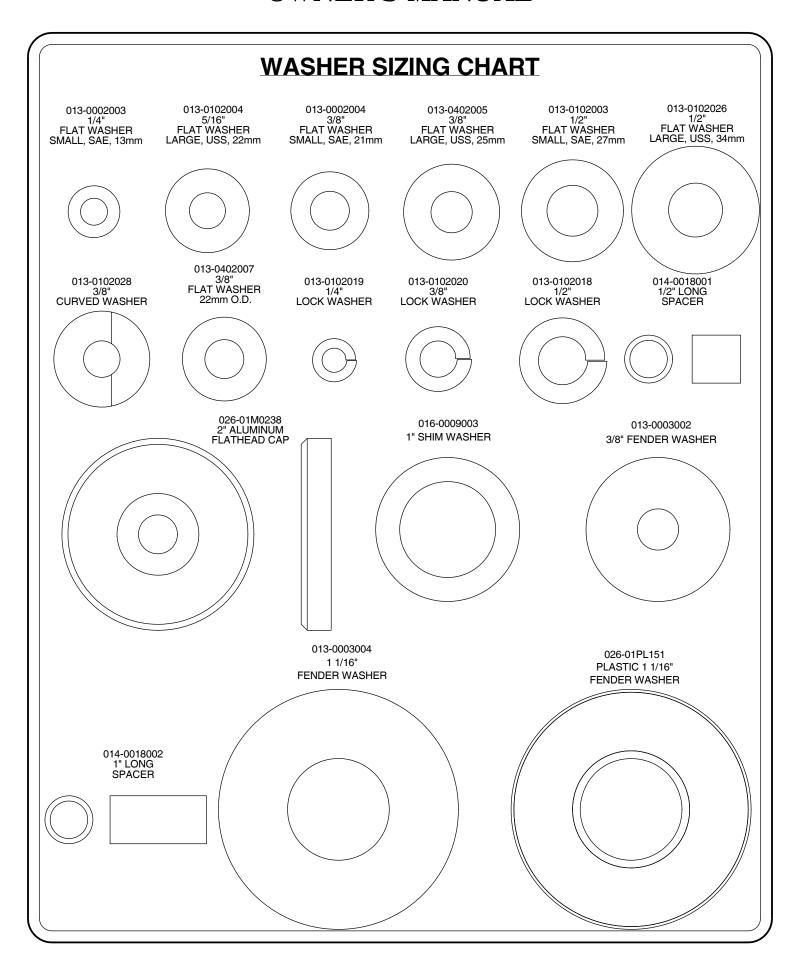

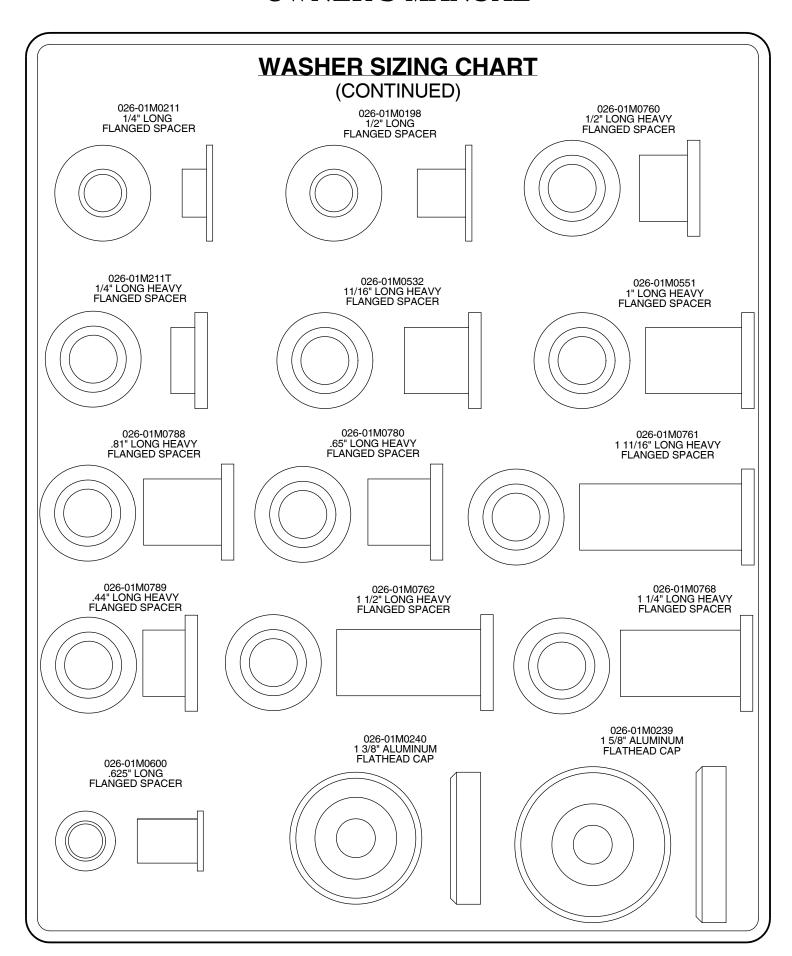

MAINTENANCE SCHEDULE

| ROUTINE | COMMERCIAL / LIGHT COMMERCIAL MAINTENANCE | HOME MAINTENANCE | L | ATE | STL | DATE | EN | TRY | |
|--|---|---------------------|---|-----|-----|------|----|-----|--|
| Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins | DAILY | WEEKLY | | | | | | | |
| Clean; Upholstery | DAILY | WEEKLY | | | | | | | |
| Inspect; Cables or Belts and their tension | DAILY | WEEKLY | | | | | | | |
| Inspect; Accessory Bars, and Handles | WEEKLY | 3 MONTHS | | | | | | | |
| Inspect; All Decals | WEEKLY | 3 MONTHS | | | | | | | |
| Inspect; All Nuts and Bolts, Tighten if needed | WEEKLY | 3 MONTHS | | | | | | | |
| Inspect; Anti-Skid Surface | WEEKLY | 3 MONTHS | | | | | | | |
| Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube) | MONTHLY | 3 MONTHS | | | | | | | |
| Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing | MONTHLY | 3 MONTHS | | | | | | | |
| Clean and Wax; All Glossy Finishes | 6 MONTHS | YEARLY | | | | | | | |
| Repack with Grease; Linear Bearings | 6 MONTHS | YEARLY | | | | | | | |
| Replace; Cables, Belts and Connecting Parts | YEARLY | 3 YEARS | | | | | | | |

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

Never use ammonia, acid-based, or petroleum-based solvents on any portion of the machine as it may damage the finish.

HOIST FITNESS SYSTEMS GENERAL MAINTENANCE INFORMATION

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- *Check all pieces for signs of visible wear or damage.
- *Check springs in snap hooks and pull-pins for proper tension and alignment.
- *If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- *To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- *Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- *Replace ripped or warn upholstery immediately.
- *Keep sharp or pointed objects clear of all upholstery.

Decals:

*Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- *Inspect all nuts and bolts for any loosening and tighten if needed.
- *Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

*These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- *Hoist uses only high quality belt, and mil-spec cables.
- *Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- *While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- *Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- *Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- *Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- *Wipe down adjusting tubes with a dust free rag before applying lubricant.
- *Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

*Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

WEIGHT TRAINING TIPS

Use this manual to guide you through the basic exercises you can perform on your RPL-5303-A HOIST® Fitness System. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your RPL-5303-A HOIST® Fitness System, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.

Enjoy your RPL-5303-A HOIST® Fitness System!

| Totals | | | | | | | | | | | | Exercise | _ Date |
|--------|--|--|--|--|--|--|--|--|--|--|--|---------------------------------|--------|
| | | | | | | | | | | | | S | _ |
| | | | | | | | | | | | | ᄝ | |
| | | | | | | | | | | | | - € | _ |
| | | | | | | | | | | | | S | _ |
| | | | | | | | | | | | | B | |
| | | | | | | | | | | | | ₩ | _ |
| | | | | | | | | | | | | S | - |
| | | | | | | | | | | | | R₩ | |
| | | | | | | | | | | | | $\frac{\mathbf{v}}{\mathbf{s}}$ | _ |
| | | | | | | | | | | | | ₩ R | _ |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | $\frac{7}{\text{S}}$ | _ |
| | | | | | | | | | | | | B | _ |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | S | _ |
| | | | | | | | | | | | | ₽ | _ |
| | | | | | | | | | | | | - € | |
| | | | | | | | | | | | | တ | _ |
| | | | | | | | | | | | | R | 1 |
| | | | | | | | | | | | | ₩ | |
| | | | | | | | | | | | | S | _ |
| | | | | | | | | | | | | R | |
| | | | | | | | | | | | | 4 | |
| | | | | | | | | | | | | S | - |
| | | | | | | | | | | | | ᄝ | |
| | | | | | | | | | | | | W | L |
| | | | | | | | | | | | | S | _ |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | - ₹ | _ |
| | | | | | | | | | | | | S | _ |
| | | | | | | | | | | | | 문 | |
| | | | | | | | | | | | | ₩ | _ |
| | | | | | | | | | | | | S | _ |
| | | | | | | | | | | | | R₩ | |

VEIGHT TRAINING EXERCISE LOG

S = Sets R = Repetition per set W = Weight used

HOIST FITNESS SYSTEMS LIMITED LIFETIME WARRANTY

Hoist Fitness Systems warrants this product to the **original purchaser** to be free from defects in workmanship and/or materials under normal use or service. If at any time a component part is defective, Hoist Fitness Systems shall repair or replace it (at Hoist Fitness Systems option) within a reasonable period of time. This warranty does not cover costs of removal, transportation or reinstallation. This warranty shall not apply if the defect was caused by misuse, neglect or normal wear and tear.

WARRANTY CLAIMS. All claims require: Model number, Serial number, Date of installation, and any information supporting the existence of the alleged defect.

To complete Warranty Registration visit:

www.HOISTFITNESS.com

and click on the Warranty Registration link

Starting from the original date of purchase, normal wear and tear shall be considered as the following:

COMMERCIAL USE: All malfunctions of upholstery, grips, and coatings that occur up to one year; all malfunctions of belts, or cables up to one year; all malfunctions of pulleys, bearings, or bushings that occur up to three years. The frame and body components are warranted for ten years, with structural moving parts warranted for five years.

LIGHT COMMERCIAL USE: All malfunctions of upholstery, grips, and coatings that occur up to one year; all malfunctions of belts, or cables up to one year; all malfunctions of pulleys, bearings, or bushings that occur up to three years. The frame and body components are warranted for ten years, with structural moving parts warranted for five years.

HOME USE: All malfunctions of grips, paint, and chrome that occur up to ten years; all malfunctions of electronic components, belts, cables, or upholstery that occur up to ten years; all malfunctions of pulleys, bearings, or bushings that occur up to ten years. The frame and all welded components are warranted for the life of the product.

PLEASE NOTE THAT NOT ALL HOIST PRODUCTS ARE MADE FOR COMMERCIAL USE. Refer to the instructions page of your owners manual or consult with you fitness product dealer to establish if a product is made for commercial use or not. Using a non-commercial product in a commercial setting can result in serious injury or death! Hoist Fitness Systems sole responsibility shall be to repair or replace the component within the terms stated above. Hoist Fitness Systems shall not be liable for any loss or damage of any kind including any incidental or consequential damages resulting, directly or indirectly from any warranty expressed or implied or any other failure of this product.

LIGHT COMMERCIAL USE: Our Light Commercial warranty applies to facilities that **DO NOT** charge monthly membership dues and where the equipment would be used by **no more than 50** people per day. Examples of Light Commercial facilities include hotels, apartment complexes, personal training studios, fire stations, police stations, etc., that meet the criteria stated above.

WHAT IS NOT COVERED BY THIS WARRANTY: Hoist's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additions below. This warranty neither assumes nor authorizes any person to assume obligations other than expressly covered by this warranty.

NO CONSEQUENTIAL DAMAGES: Hoist is not responsible for economic loss; profit loss; or special, indirect, or consequential damages.

WARRANTY IS NOT TRANSFERABLE: This warranty is not assignable and applies only in favor of the original purchaser/user to whom delivered. Any such assignment or transfer shall void the warranties herein made and shall void all warranties, expressed, implied or statutory, except the one (1) and five (5) year warranties described above. These warranties are exclusive and in lieu of all other warranties, including implied warranty and merchantability or fitness for a particular purpose. There are no warranties which extend beyond the description on the face hereof.

TRANSPORTATION COSTS: Hoist will accept parts covered under this warranty freight collect, provided that shipment has received prior approval. Hoist is not responsible for any other transportation costs, but will ship freight collect parts either repaired or replaced under these warranties.

Hoist Fitness Systems 11900 Community Rd. Poway, CA. 92064 (800)548-5438

PLEASE KEEP THIS FOR YOUR RECORDS